



Installation Instructions Seat Cover, Rear Kit

Vehicle Application:
Wrangler Unlimited
2008-2012
Part Number 29281

Installation Tips

Read and follow, precisely, all installation instructions provided when installing this product. Failure to do so may result in a poor fit, and could place occupants of the vehicle in a potentially dangerous situation.



WARNING

To reduce the risk of accidental injury: Follow all vehicle Manufacturer's and Bestop® safety messages, application and installation instructions.

- Do not remove seats from the vehicle to install this product.
- Fit and maintain sides of seat cover as tight to seat as possible, always matching front to side seam of seat with similar panels and seams of seat cover.
- Remove headrest carefully to avoid damaging manufacturer's wiring. Assure all plugs are connected after installation of seat cover.
- Do not use and replace if seat cover becomes damaged or wear no longer allows tight fit to seat sides.

WEAR SEAT BELTS AT ALL TIMES



Tools



Safety Glasses



CAUTION

Safety glasses should be worn at all times when installing this product.

Installation Time



1 Hour

Skill Level



2 - Moderately Difficult

Support

We're here to help!
Go to www.Bestop.com and
click "Contact Us"



See a video showing
installation of this product at:
www.bestop.com/video



Installation Instructions Seat Cover, Rear Kit


Vehicle Application:
Wrangler Unlimited
2008-2012
Part Number 29281

Parts List

- Required parts for each installation section - Page number in Installation Guide

Section 1 Seatback Covers Pages 3-4	Section 2 Seat Bottom Covers Pages 5-6
<div data-bbox="193 380 562 773"></div> <div data-bbox="235 786 420 883"><p>Large Seatback Cover Qty. 1</p></div> <div data-bbox="638 380 873 764"></div> <div data-bbox="651 786 833 883"><p>Small Seatback Cover Qty. 1</p></div>	<div data-bbox="1014 428 1507 781"></div> <div data-bbox="1165 779 1383 876"><p>Large Seat Bottom Cover Qty. 1</p></div> <div data-bbox="1583 436 1965 753"></div> <div data-bbox="1604 774 1829 872"><p>Small Seat Bottom Cover Qty. 1</p></div>
Section 3 Seat Bottom Covers Page 6	Section 3 Page 6
<div data-bbox="308 1211 438 1317"></div> <div data-bbox="483 1214 722 1313"><p>Seat Bottom Elastic Cord S-hooks Qty. 2</p></div>	<div data-bbox="1167 1060 1703 1295"></div> <div data-bbox="1190 1317 1698 1383"><p>2008-2010 — OR — 2011-2012 Vinyl Covers Fabric Covers</p></div> <div data-bbox="1354 1424 1551 1487"><p>Headrest Covers Qty. 2 sets of 2</p></div>


Step 1

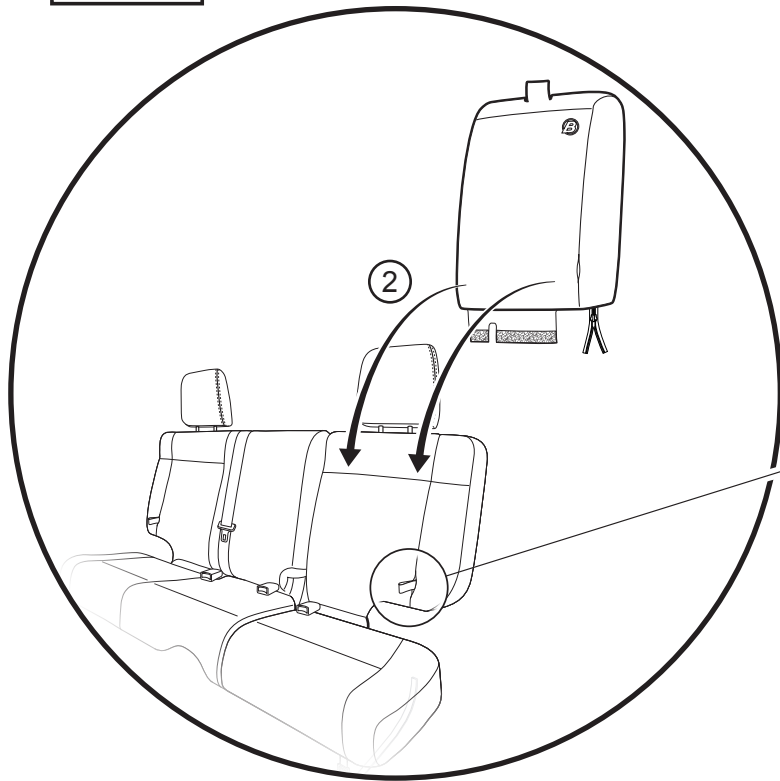

Step 1


- ① Unzip the back of the Small seatback cover.
- ② Slip the seat cover over the headrest and over the Small seatback. You will have to open the hook-&-loop hole at the top of the seat cover to allow the headrest to pass through.
- ③ Feed the seatback release tab through the hole in the seat cover.

Step 2

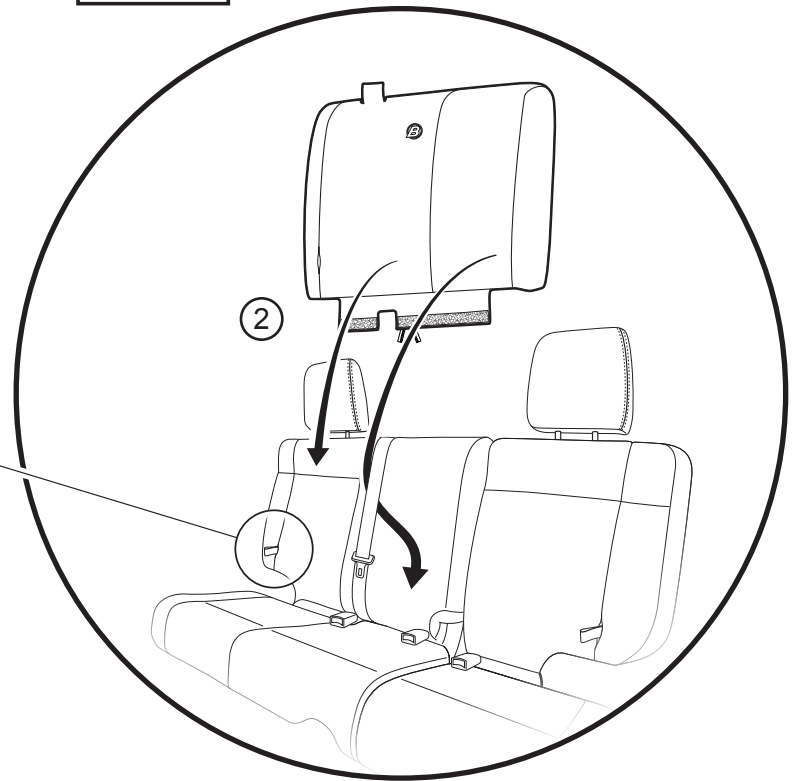


Step 2

- ① Unzip the back of the Large seatback cover.
- ② Slip the seat cover over the headrest, under the seatbelt, and over the Large seatback. You will have to open the hook-&-loop hole at the top of the seat cover to allow the headrest to pass through.
- ③ Feed the seatback release tab through the hole in the seat cover.

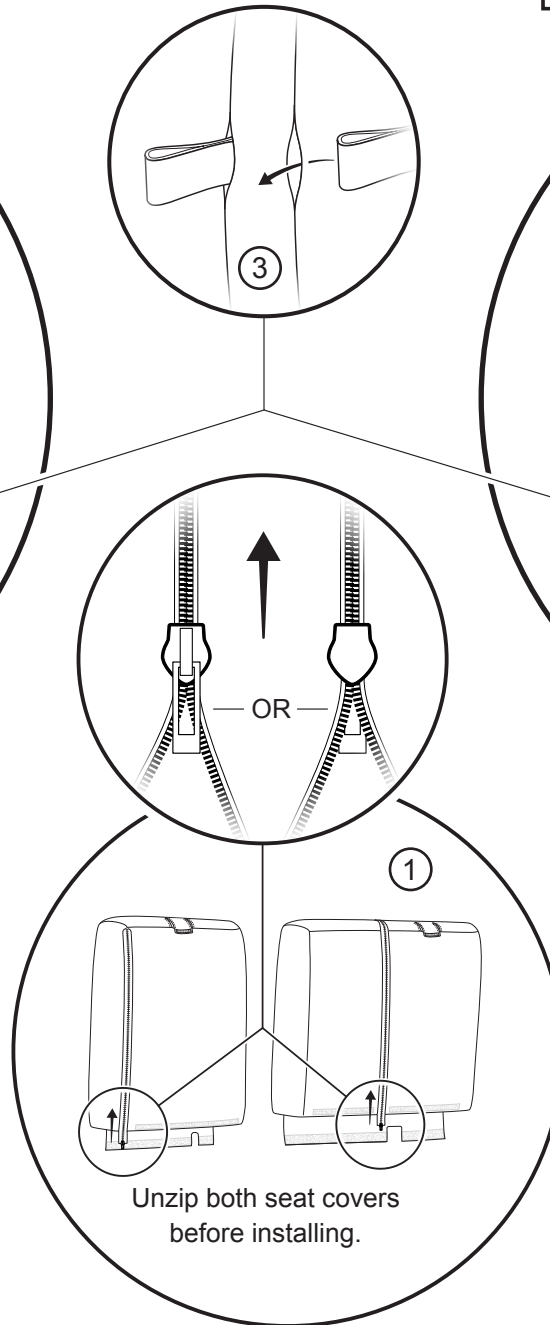

Step 1

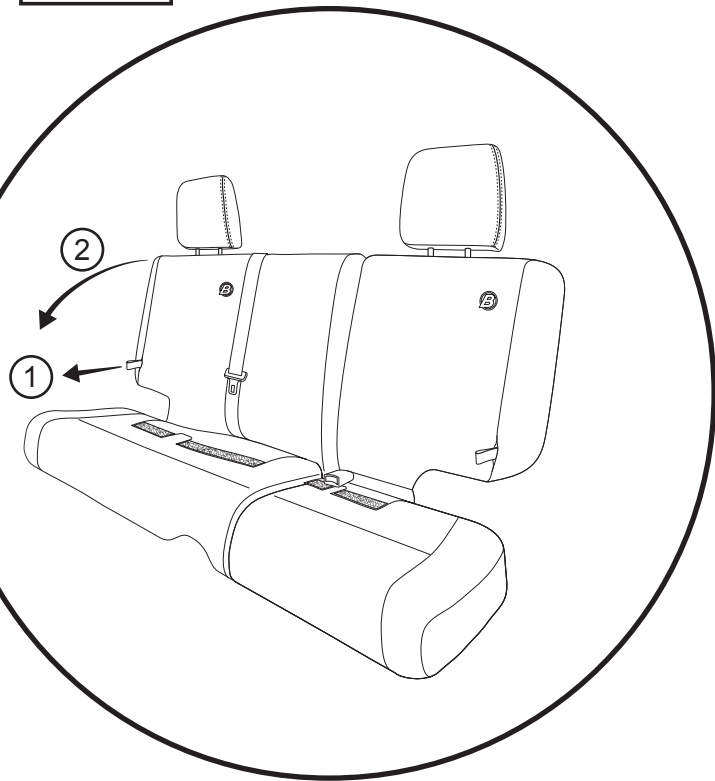

Step 1


- ① Pull the Large seatback release tab, and
- ② tilt the seatback forward about halfway, which will provide a space between the seatback and seat bottom.

With the seatback tilted forward, tuck the flap at the bottom of the Large seatback cover between the seatback and the seat bottom.

Repeat this for the Small seatback cover.

Move both seatbacks back to upright.


Step 2

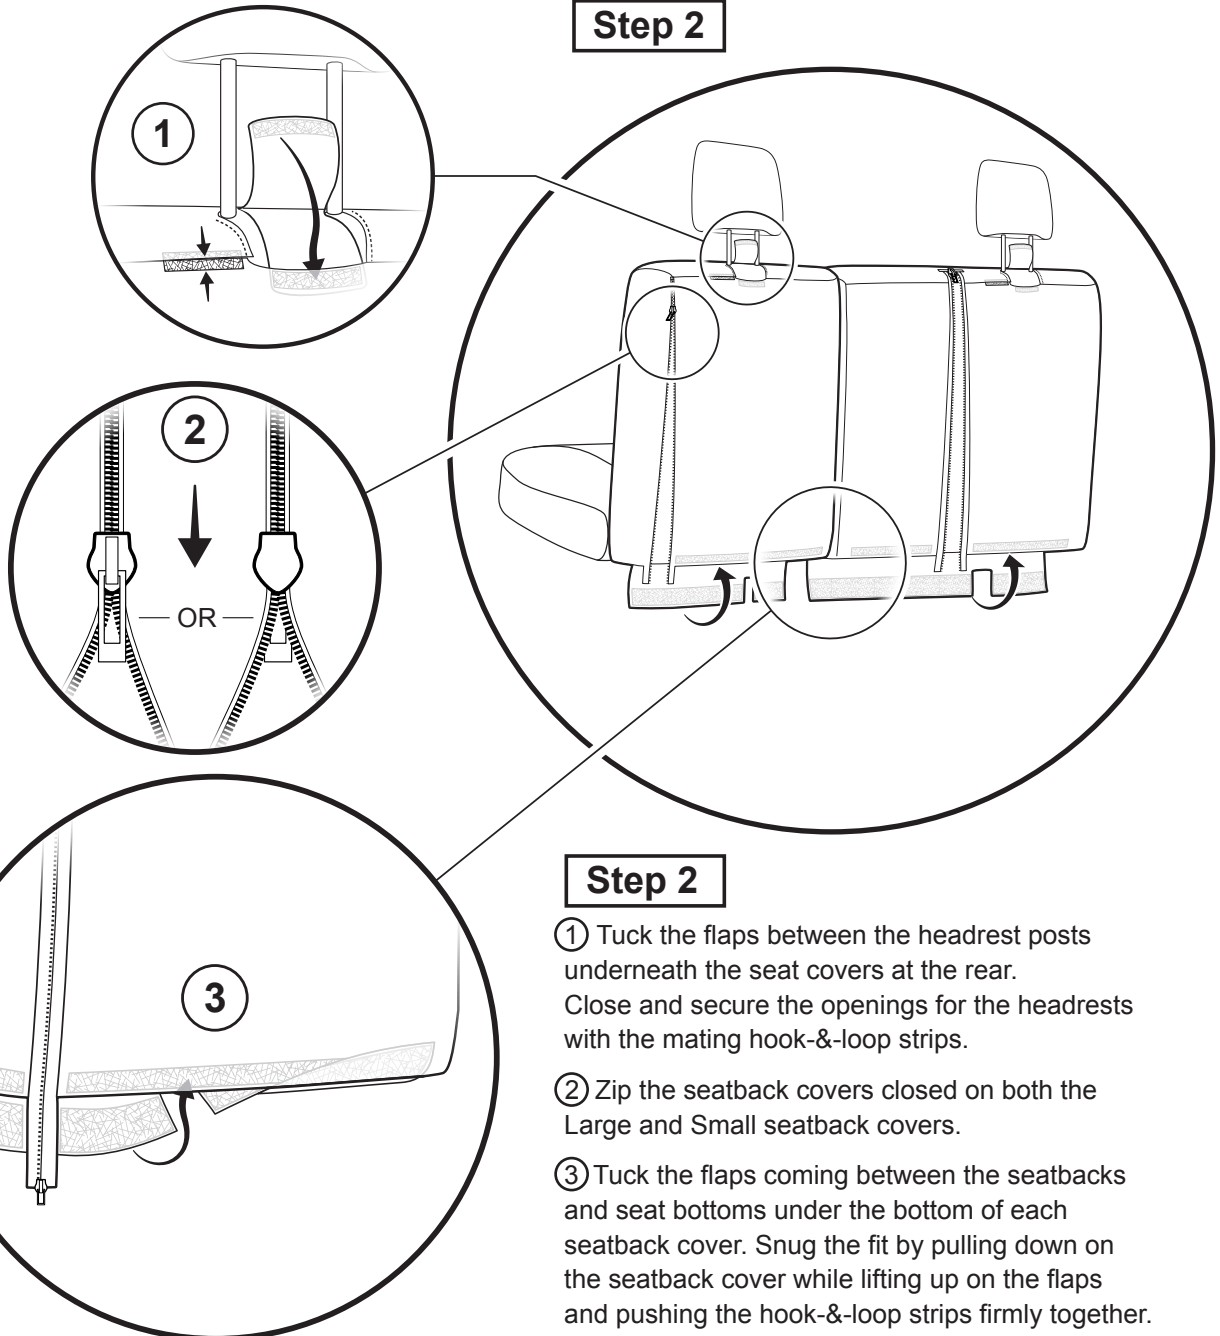

Step 2

- ① Tuck the flaps between the headrest posts underneath the seat covers at the rear. Close and secure the openings for the headrests with the mating hook-&-loop strips.
- ② Zip the seatback covers closed on both the Large and Small seatback covers.
- ③ Tuck the flaps coming between the seatbacks and seat bottoms under the bottom of each seatback cover. Snug the fit by pulling down on the seatback cover while lifting up on the flaps and pushing the hook-&-loop strips firmly together.


Step 1

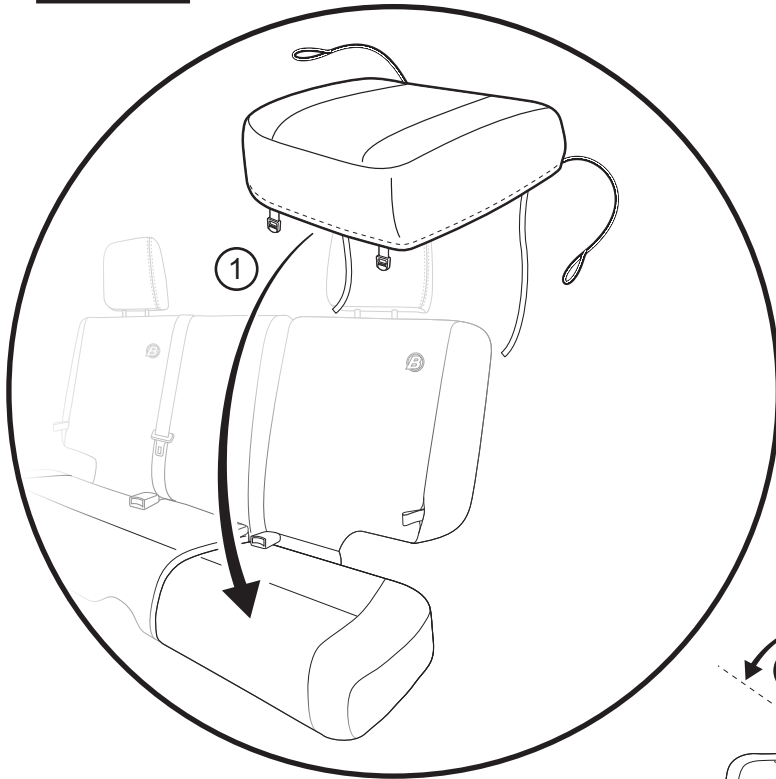

Step 1

- ① Slip the Small seat bottom cover over the Small seat bottom.
- ② Tilt the seatback halfway forward, to open a space between the seatback and seat bottom.
- ③ Feed the straps through between the seatback and seat bottom, and bring toward the front under the seat.
- ④ Attach the 2 nylon straps at the front of the underside of the seat to the buckles. Give the straps a gentle tug to snug the covers.


Step 2

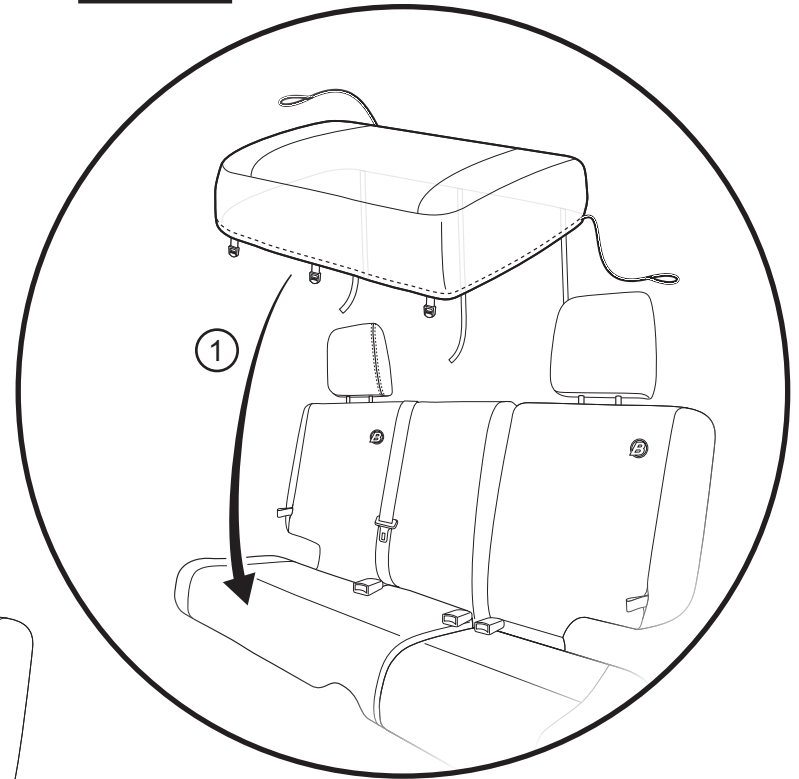


Step 2

- ① Slip the Large seat bottom cover over the Large seat bottom.

Follow ② ③ and ④ from **Step 1** doing all the same things as you did on the Small seat bottom cover.

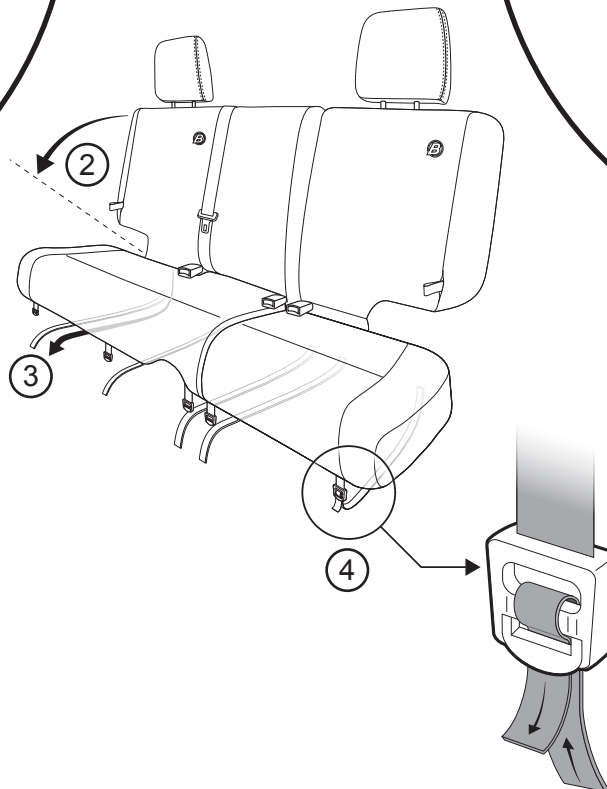

Step 1

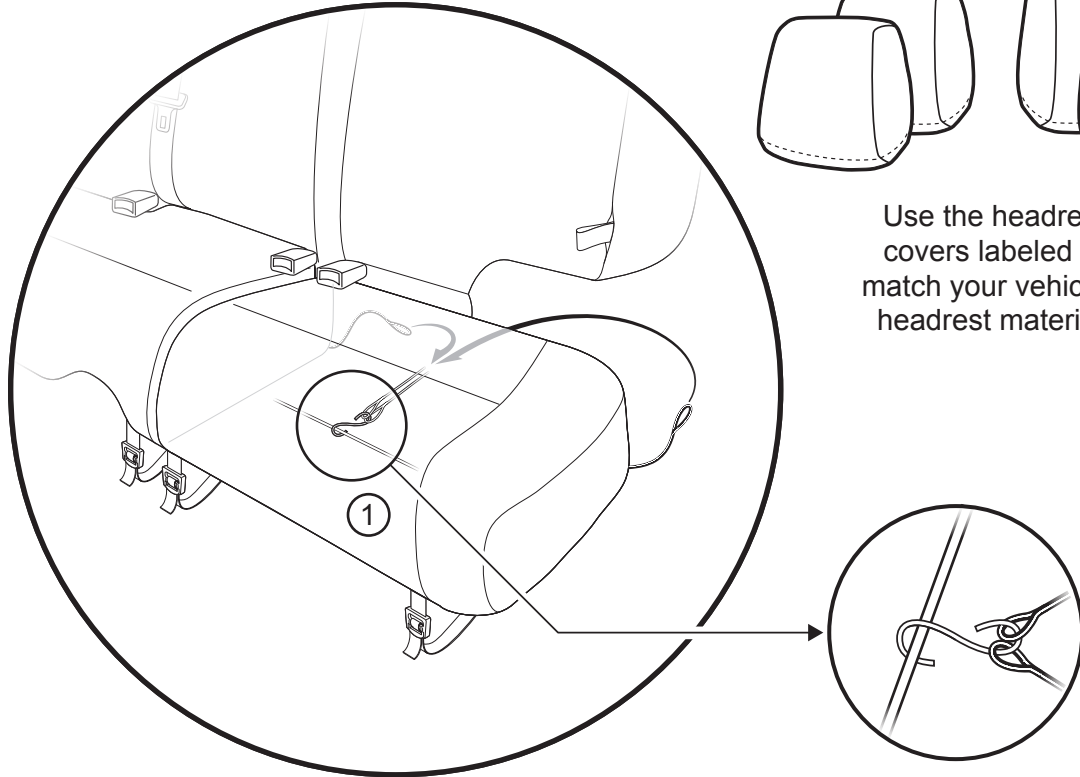


Step 1

- ① Attach the two ends of the elastic cords on the Small seat bottom cover to the closed end of one of the s-hooks.

Attach the s-hook to a cross-member or wire underneath the seat, making sure to keep the cords away from the seat adjustment tracks.

Repeat this procedure for the elastic cords on the Large seat bottom cover.

Step 2

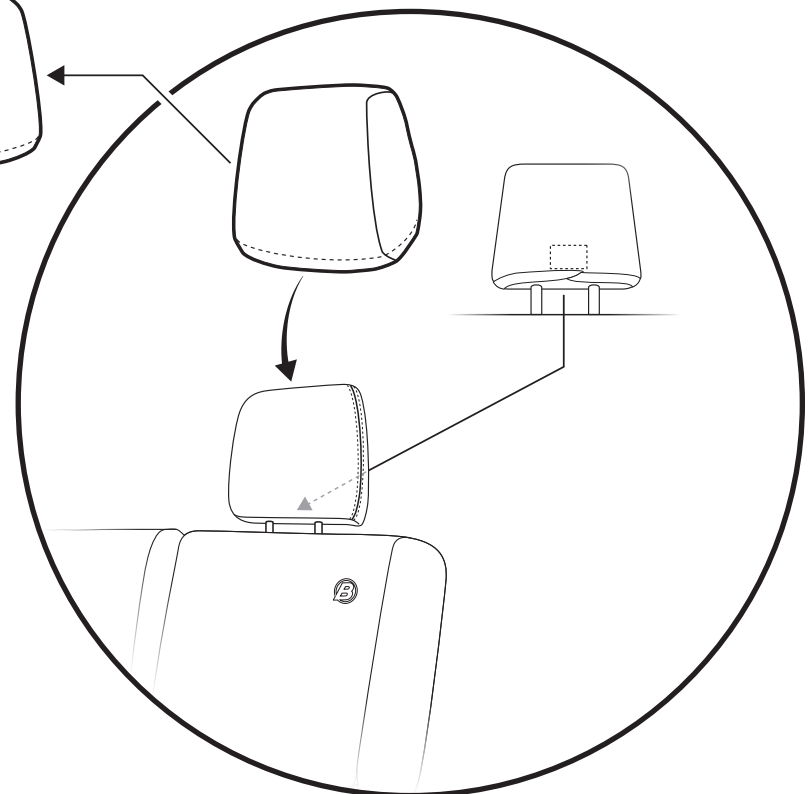

Step 2

Select the correct headrest covers from the 4 headrest covers that come in the installation kit. Use the headrest covers labeled to match your vehicle's headrest material.

Wrap the headrest covers over the headrests, making sure that the crossed elastic edging and internal label are at the back of each headrest. Adjust the seams for a smoother appearance.