ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

REMOVAL/INSTALL OF BLEND DOOR REPAIR KIT (902-603) Jeep Grand Cherokee 2004-99

PLEASE WEAR SAFETY GLASSES!

Parts Included:

- Actuator Repair Sleeve
- Mounting Plate
- Precision Hole Saw Tool

Tools required for removal and installation of Blend Door Repair Kit:

- Battery Powered Drill
- Needle Nose Pliers

CAUTION: This repair applies only to an air temperature door control shaft that has cracked or separate at the actuator driven end of the door shaft.

NOTE: This repair is applicable to all 1999–2004 Jeep Grand Cherokee models with a single air temperature door HVAC system. On 1999–2004 Jeep Grand Cherokees equipped with a dual air temperature door HVAC system (individual doors for driver's and passenger's side), the repair is applicable for the driver's side blend door ONLY.

Instructions

STEP 1: Open the glove compartment.

STEP 2: Press inward on the two rubber stops at the top rear corners of the glove compartment. This will allow the glove compartment to release and drop toward the floor.



Disclaimer:

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

STEP 3: The air temperature actuator is located to the left of the glove compartment and is held in place with Phillips type screws. Remove the air temperature actuator screws (Qty 2) from the HVAC module.



STEP 4: Remove the air temperature actuator from the HVAC module to access the temperature door shaft. It is not necessary to disconnect the power source from the actuator.




STEP 5: Inspect the end of the temperature door shaft. Remove any loose door shaft pieces and discard. Confirm that the end of the shaft has in some part weakened or completely separated from the temperature control door. Gently rotating the end of the shaft should confirm this condition.

Disclaimer:

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

STEP 6: Using needle nose pliers, pull the temperature door shaft key away from the HVAC case to remove it.

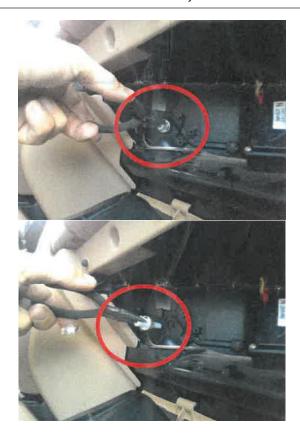

STEP 7: Install the mounting plate using the air temperature actuator screws (Qty 2). The mounting plate incorporates a screw with spacer at the right lower corner (circled in photo). The screw aligns to a screw hole in the HVAC case. Tighten this screw until it bottoms out to provide stability for the mounting plate.



Disclaimer:

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

STEP 8: Insert the precision hole saw tool inside the mounting plate.



STEP 9: Attach a battery powered drill to the precision hole saw tool. Drill at a moderate speed until the outer sleeve of the precision hole saw tool bottoms out onto the mounting plate.



STEP 10: Back out the precision hole saw tool from the mounting plate. Remove the screws holding the mounting plate (Qty 3). Remove the mounting plate. Remove any plastic shavings or other debris left at the entry point into the HVAC module.



Disclaimer:

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

STEP 11: Insert the actuator repair sleeve into the HVAC case, circling the temperature door shaft.





NOTE: To align the actuator repair sleeve with the temperature door shaft, insert the repair sleeve with the slot pointing toward the front of the vehicle at a 4 o'clock position.



STEP 12: Align the air temperature actuator with the actuator repair sleeve and rotate into an engaged position.

Disclaimer:

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

STEP 13: Install and tighten the air temperature actuator screws (Qty 2) to the HVAC module.



STEP 14: Reinstall the glove compartment by depressing the two rubber stops at the top rear corners of the glove compartment.

We appreciate your opinions regarding this product!

Please call our Technical Assistant with any challenges or suggestions regarding the installation or operation of this product.

1-800-523-2492

Disclaimer