



## ***DRAKE OFF ROAD***

Jeep Gas Cap Installation Instructions – Part # JP-190025-BL & JP-190005-BL & JP-190005-BLK

1. Remove OE gas cap located towards the rear driver side of your vehicle.
2. Hold Drake gas cap as shown.



3. Insert key provided and turn counter-clockwise. (Counter clockwise is when you turn the key so that the top of the key rotates to the left)



4. Leaving key installed in gas cap, position cap near gas filler.



5. Begin to thread cap into gas fill neck in a clockwise direction.



6. Continue tightening cap. Use extra force and turn cap until you hear two audible clicking noises.



7. Hold cap and turn key clockwise until it stops and then remove key from cap.



**FOR FURTHER HELP ON HOW TO INSTALL YOUR FUEL CAP SEE OUR VIDEO ON THE INTERNET AT**

<http://www.youtube.com/watch?v=z020wDaQjg4>

### **Tech Bulletin:**

**Should your vehicle have an issue with a Check Engine Light on a TJ or Check Fuel Cap message on a JK. Please tighten Fuel cap until you hear at least 3 clicks of the cap. After securely tightening the cap sensor light or indicator message will reset shortly. Check Engine Lights and warning messages do not always go off instantly after tightening the fuel cap so please allow time for your Jeeps emissions systems to reset. Be sure that cap does not loosen while turning the key to remove it.**

Should you have any questions or need technical assistance feel free to call Drake Automotive Group at 702-853-2060 Monday – Friday from 8:00 am to 5:00 pm Pacific Standard Time.