

Mirrors for Jeep vehicles 1955 - Current

Installation and Instruction Manual
#13111.0401 (Round Head) and #13111.0400 (Square Head)



CAUTION

READ ALL SAFETY MESSAGES AND UNDERSTAND ALL INSTRUCTIONS AND PROCEDURE NOTICES BEFORE ATTEMPTING TO INSTALL OR USE THIS PRODUCT.

REQUIRED TOOLS:

SAFETY GLASSES
14MM WRENCH
12MM WRENCH
11MM WRENCH

KIT CONTENTS LIST:

MIRROR HEADS & HARDWARE (2 EACH)
MIRROR ARMS (2 EACH)
NYLOC NUTS (2)
NYLON WASHERS (4)
STEEL WASHERS (4)



Figure 1

Step One: Remove Doors

Put on safety glasses. Start by removing your Jeep doors and locating the upper door hinge on the driver's side.



Figure 2

Step Two: Install Mirror Arm

Install a metal washer and then a nylon washer onto the threaded end of the mirror arm as shown in Figure 1.

As shown in Figure 2, install the mirror arm into the door hinge and then from the bottom, install another nylon and steel washer, followed by a nyloc nut. Make sure the nylon washers are sandwiched between the steel washers and in contact with the door hinge so as not to damage the paint on the vehicle.


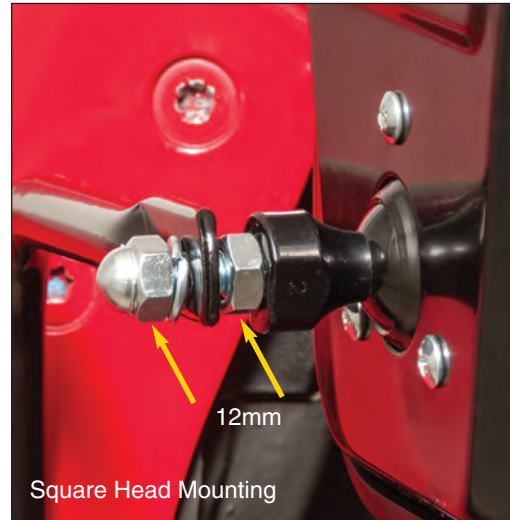


Figure 3

As shown in Figure 3, tighten the Nyloc nut using a 14mm wrench or socket while holding the mirror arm in place. Tighten until the arm is snug in the door hinge but not so tight that it cannot be adjusted.

CAUTION

READ ALL SAFETY MESSAGES AND ALWAYS WEAR SAFETY GLASSES WHEN WORKING WITH TOOLS.

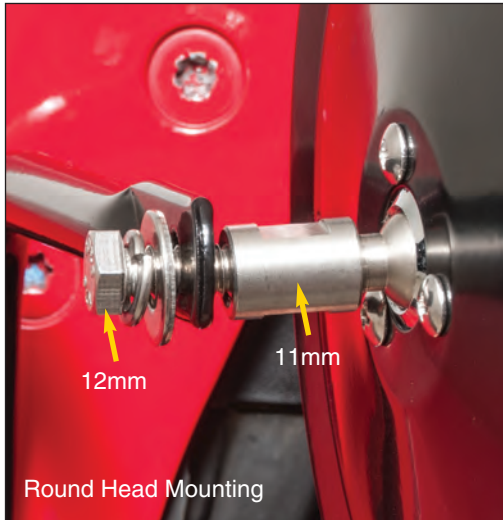

Step Three: Install Mirror Head

Install the Mirror head depending upon round or square design. Tighten the round mirror head with a 12mm wrench on the bolt head and an 11mm wrench on the mirror barrel. Tighten the square head design with two 12mm wrenches on the jam and acorn nuts.

The tension of the mirror head can be adjusted using the 3 phillips head screws on the backside of the mirror. **DO NOT OVER TIGHTEN.** The mirror should not be so tight that it cannot be adjusted. Adjust mirror then check and snug all fasteners. Repeat steps for the passenger side mirror.

