




OMIX-ADA, Inc.

Part 13216.03
13216.04

460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Ballistic Front Seat Covers

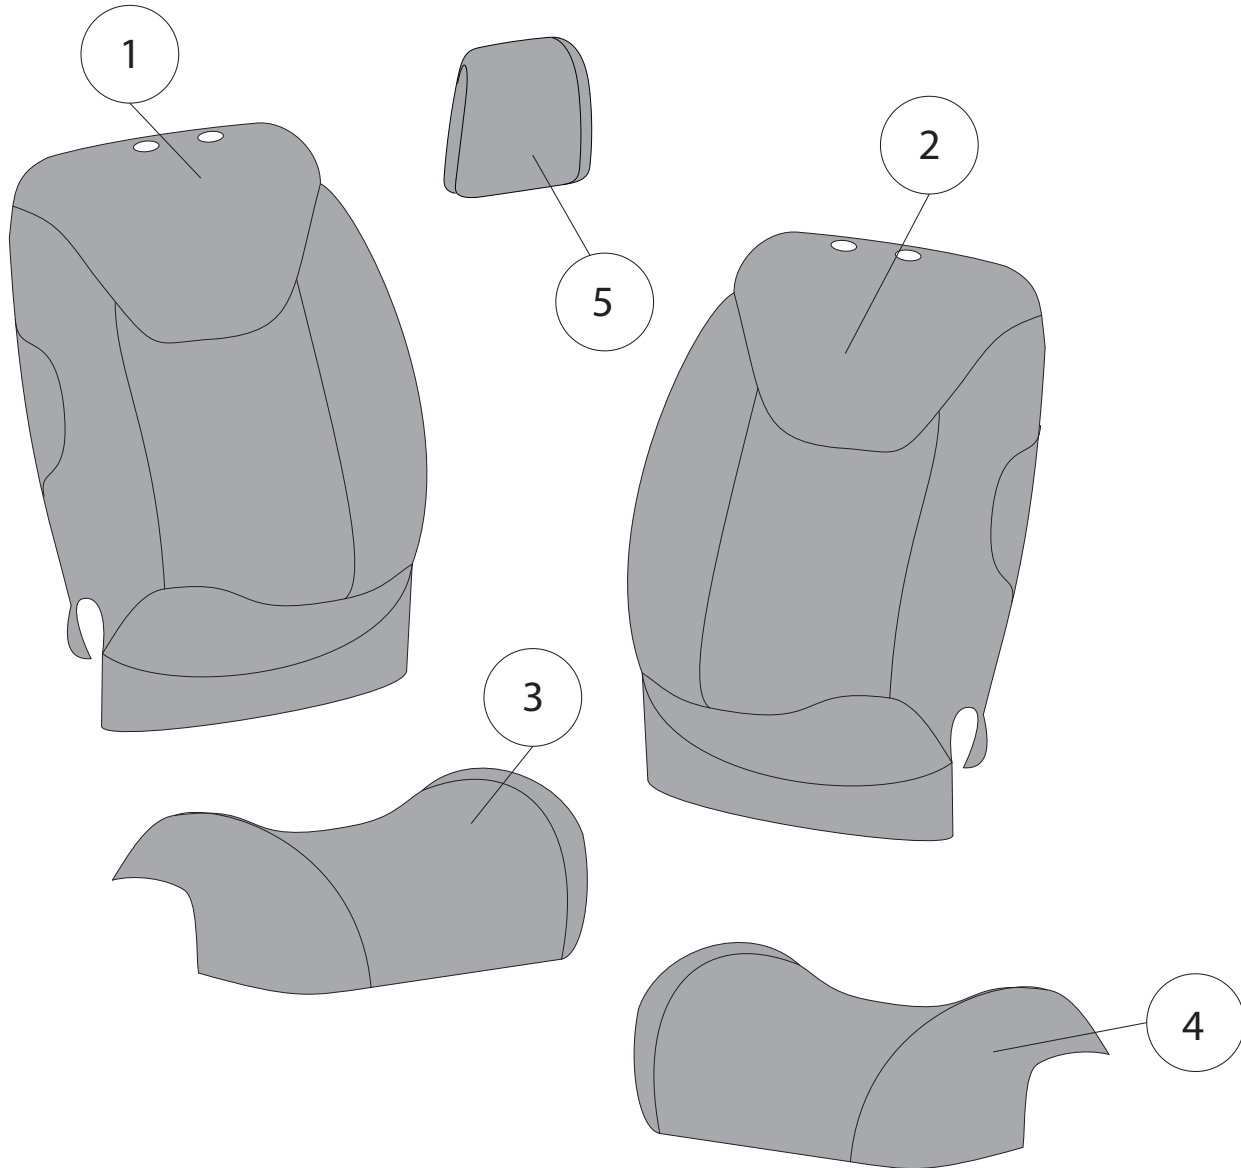

Components

- | | |
|-----------------------------------|-----|
| 1. Ballistic Front Back Cover, RH | (1) |
| 2. Ballistic Front Back Cover, LH | (1) |
| 3. Ballistic Front Seat Cover, RH | (1) |
| 4. Ballistic Front Seat Cover, LH | (1) |
| 5. Ballistic Head Rest Cover | (2) |

OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649 | EMAIL: techsupport@omix-ada.com

FOR WARRANTY INFORMATION VISIT: www.Omix-Ada.com




OMIX-ADA, Inc.

460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com


Ballistic Front Seat Covers

To Install Front Seat Covers:


1. Remove headrest from seat.
2. Fully slide Front Back Cover over top portion of seat.

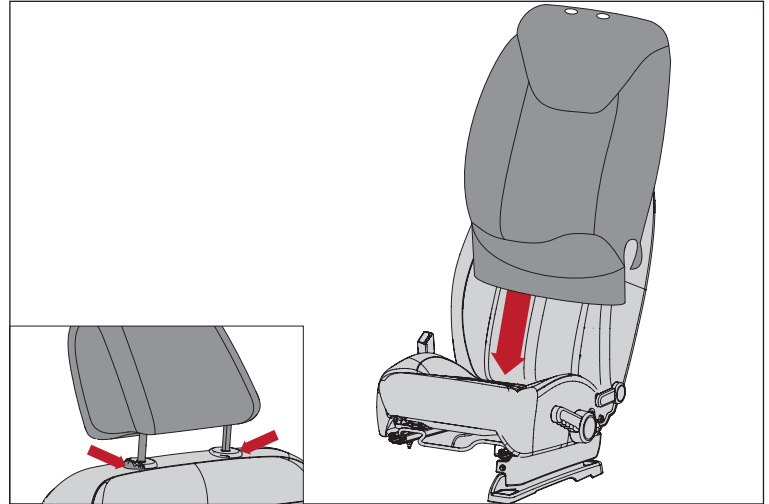

3. Zip two zippers on back of seat cover.

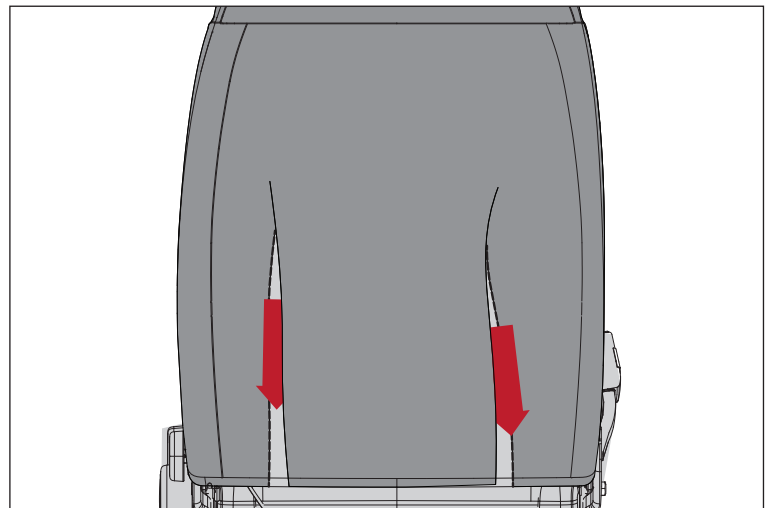

4. Push bottom fabric flap through crease in bottom of seat toward rear of vehicle and secure to rear fabric of back cover.

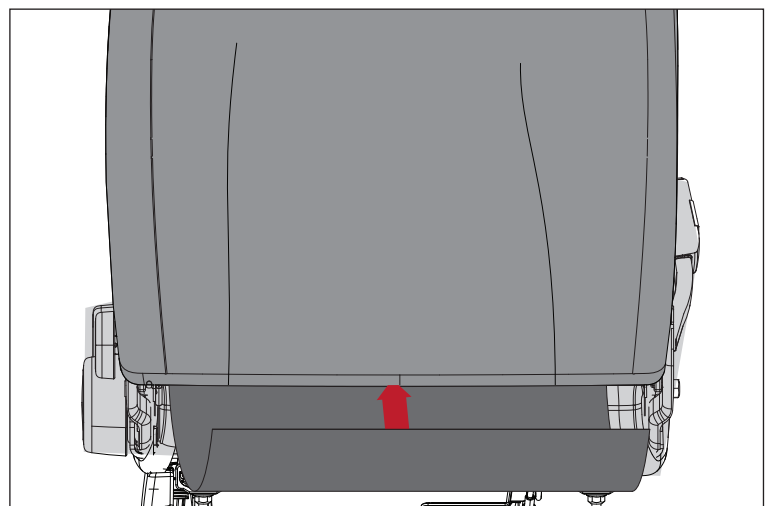




OMIX-ADA, Inc.




460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Ballistic Front Seat Covers

5. Secure airbag fabric flap by pressing fabric into corresponding cut out on side of seat.

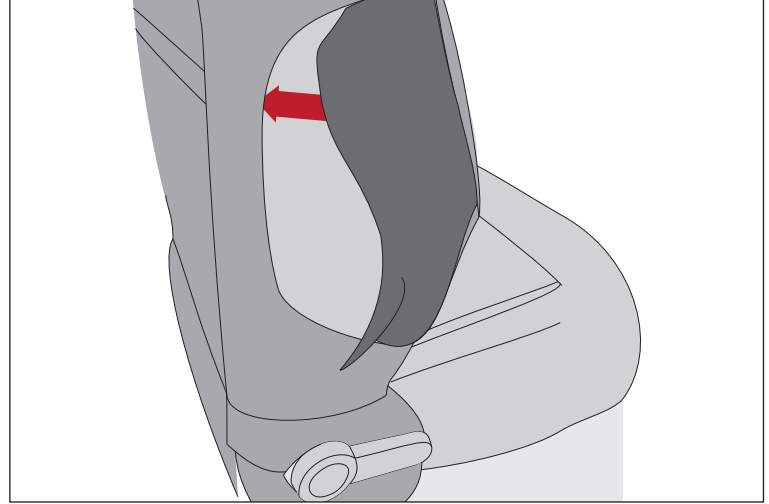


6. Press fabric down around head rest buttons until through cut outs in fabric.

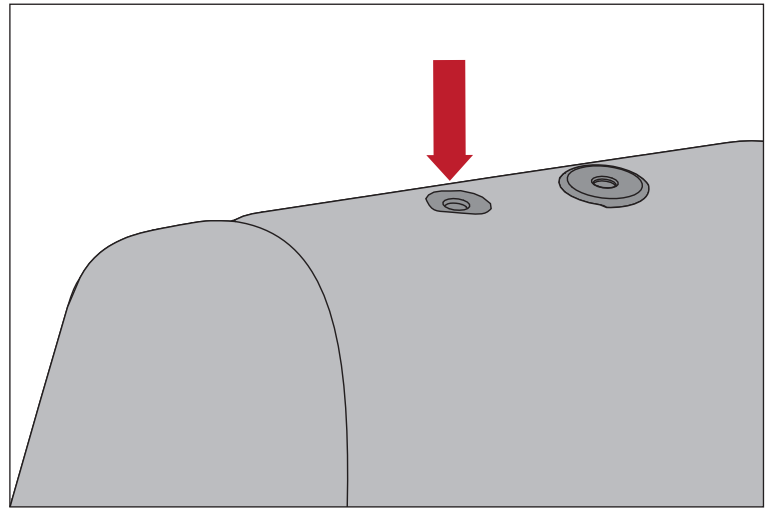

7. For 2007-2010 models, slide Head Rest Covers over head rests. For 2011-current models, slide Head Rest Covers over head rests and secure with hook and loop fabric.

8. Replace head rest on seat.

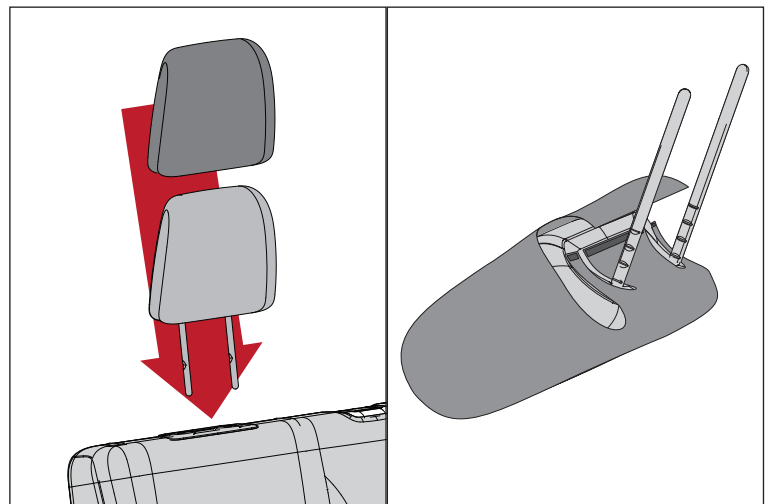




OMIX-ADA, Inc.

460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Ballistic Front Seat Covers


9. Place Front Seat Cover on bottom portion of seat.

10. Press rear buckles through crease in rear of seat.

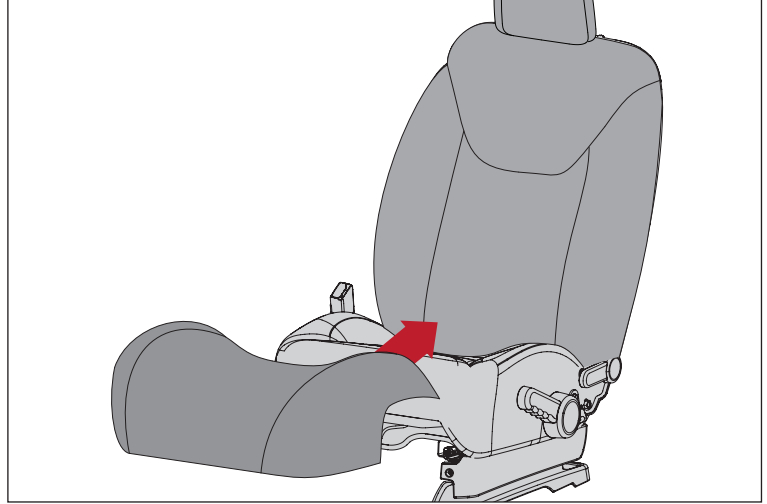

11. Secure front and rear buckles underneath seat. Tighten straps.

12. Hook side hooks underneath seat onto straps as shown on right.

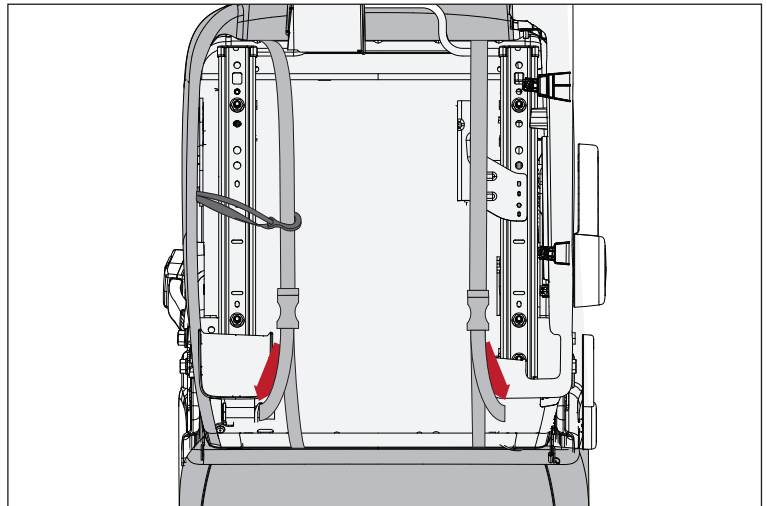

13. Slide side fabric around seat adjustment bar and secure with corresponding hook and loop fabric.

