






13551.08

460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

CB Radio Mount, Windshield, 97-02

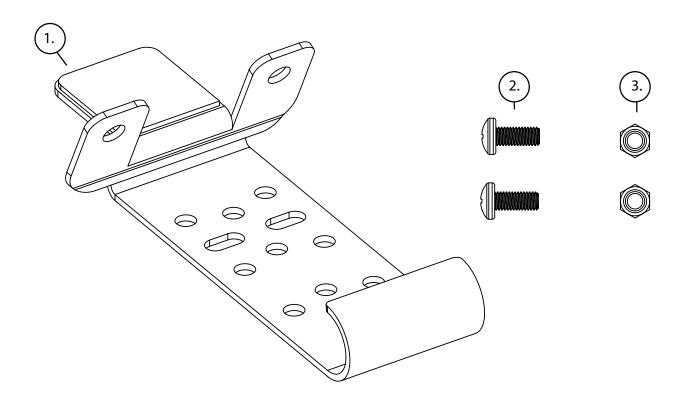

Components

1. CB Mount	(1)
2. Bolt	(2)
3 Nylon Lock Nut	(2)

OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649 | EMAIL: techsupport@omix-ada.com

FOR WARRANTY INFORMATION VISIT: www.Omix-Ada.com









460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

CB Radio Mount, Windshield, 97-02


1. Remove center footman loop by removing (2) Torx Screws

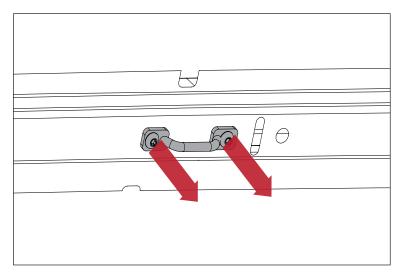

2. Reuse factory Torx Screws to install CB Mount with footman loop on outside as shown.

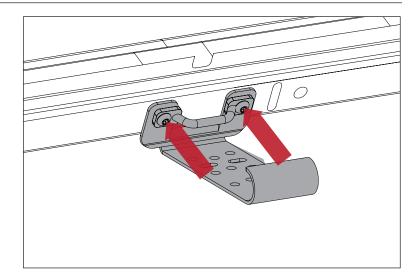

3. Install CB Radio with supplied nuts and bolts.

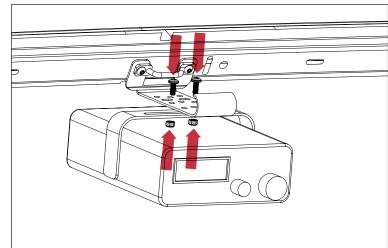

NOTICE

Make Sure any installed devices are secure and safe. Do not obstruct rear view mirror.