






Part #17212.13 17212.14 17212.15

460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

## Elite Antenna Base

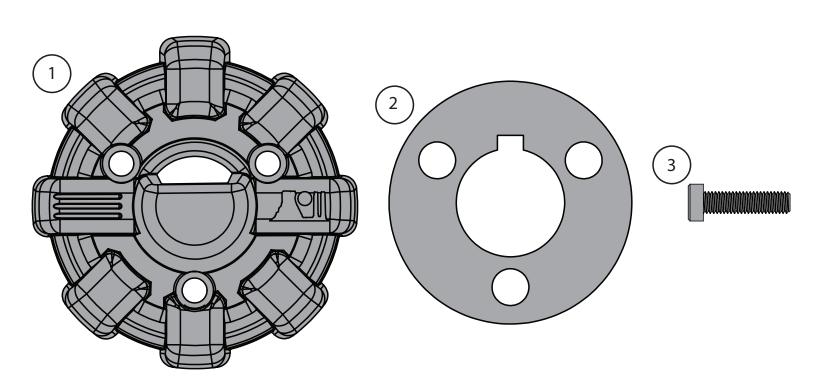

## Components

- 1. Antenna Base (1)
  2. M5 Bolt (3)
- 3. Rubber Gasket (1)

## **OMIX-ADA® TECHNICAL SUPPORT**

PHONE: M-F 8am - 5pm EST 1-800-449-6649 | EMAIL: techsupport@omix-ada.com

FOR WARRANTY INFORMATION VISIT: www.Omix-Ada.com








460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

## Elite Antenna Base

- 1. Unscrew antenna from base. Using a flat head screwdriver, remove factory antenna base cover.
- 2. Remove three factory screws from antenna base.

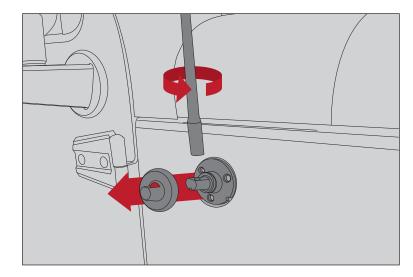

- 3. Insert three screws into Elite Antenna Base. Press screws through rubber gasket to hold in place.
- 4. Secure bolts onto vehicle, ensuring opening for antenna is facing upwards.
- 5. Re-attach antenna.

