

# INSTALLATION INSTRUCTIONS

## JEEP WRANGLER TJ

### BCY1000

#### TOOLS NEEDED

- #2 Phillips Bit
- 5/16" Socket
- 7/16" Socket
- 5/16" Wrench
- 7/16" Wrench
- Socket Driver

#### INSTALLATION PROCEDURES

##### Step 1: Preparing the Work Area (Front and Rear)

- (A) Remove the rear wheel well skirting. Using a pry bar or claw hammer to release the Christmas tree fasteners. Save for re-installation.
- (B) Remove the marker light from the front fender flare.
- (C) Remove the factory fender flares and stone guards.

##### Step 2: Edge Trim Installation (See Illustration #1)

- (A) Peel two to three inches of red vinyl backing away from edge trim tape. Applying the adhesive side of the edge trim to the inner side of the flare, affix the edge trim to the top edge of the flare (the portion that comes in contact with the vehicle).
- (B) Press edge trim into place along the top edge of the flare in one-foot increments, pulling red vinyl backing free as you continue to work your way around the top edge of the flare. Repeat steps 3A and 3B for remaining flares.

##### Step 3: Flare and Stone Guard Installation (See Illustration #2)

- (A) For the Front Flare, place a supplied washer on a supplied screw and place screw through hole in pocket. Place a 3/8" thick spacer on the screw from the back side of the pocket.
- (B) Holding the flare into position on the fender, insert the screws through the factory holes in the fender with the supplied screws. Start a supplied nut on screw but do not tighten until all screws have been installed. **Use caution:** Do not over tighten the screws. Over tightening will not allow the flare to expand and contract with temperature changes after the flare is installed.
- (C) Install the marker light into the pocket formed in the flare.
- (D) Fasten the stone guard to the vehicle with the factory screws that were previously removed.
- (E) For the **Rear Flare**, repeat steps (A) and (B). Use the supplied nuts in the positions that do not have a threaded insert in the vehicle body.
- (F) Using supplied Edge Trim Tool, seat edge trim against vehicle by hooking curved end under edge trim at one end of flare. Next, slide around outer edge of flare to the other end.
- (G) Using flat end of supplied Edge Trim Tool, seat edge trim against flare by inserting straight end between edge trim and flare at one end. Next, slide around entire edge to the other end.

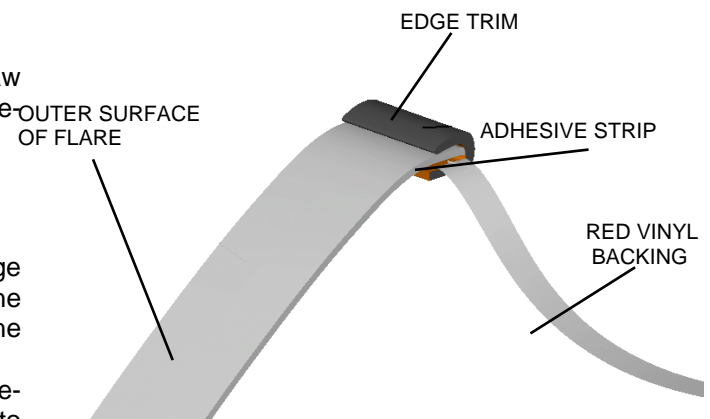


ILLUSTRATION #1

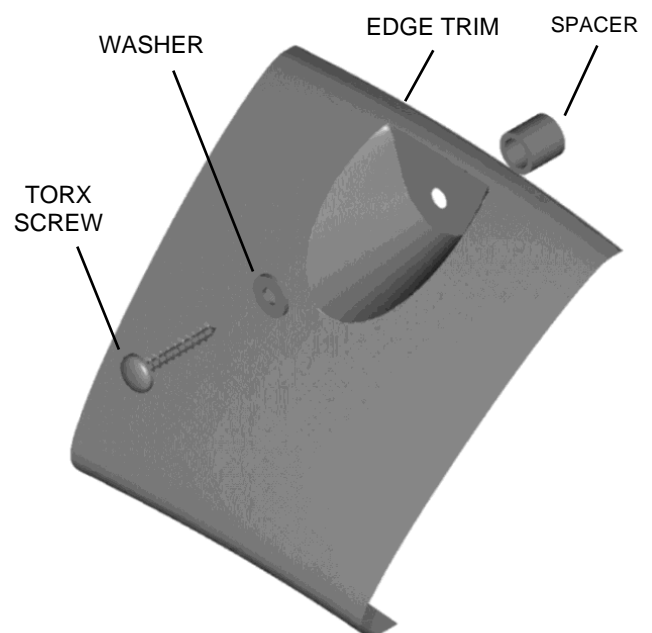


ILLUSTRATION #2