

Tailgate Net Installation Instructions



This product is not designed to retain passengers or cargo! Read instructions completely before installing your Tailgate Net.

Installation

1. Remove the tailgate. Check with the vehicle's manufacturer for best method.
2. To ensure a snug fit, have someone assist you in positioning the Tailgate Net in place across the rear of the truck.
3. Once the best location for the Footman Loops are determined, mark the (3) drilling locations with a pencil for both sides the vehicle (Figure 1).
4. Using a 1/8" drill bit carefully drill through the (6) marked locations for each of the six (6) Footman Loops (Figure 2).




Figure 1



Figure 2

5. Place the Footman Loops directly over the newly drilled holes and attached using the screws provided (Figure 3).

NOTE: Position the Footman Loop as shown in Figure 3.

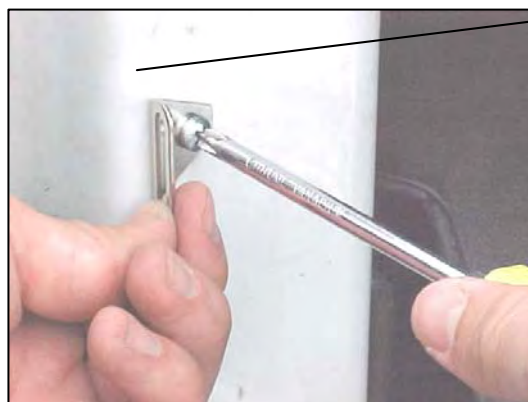

Front of Vehicle

Figure 3

6. Once all (6) Footman Loops are securely attached to the rear of the vehicle, proceed with the attachment of the Tailgate Net.
7. Insert the Tailgate Net Strap through the Footman Loop as shown in Figure 4.
8. Insert the Tailgate Net Strap through the lower slot of the webbing straps (Figure 5) and loop through the top slot as shown in Figure 6.

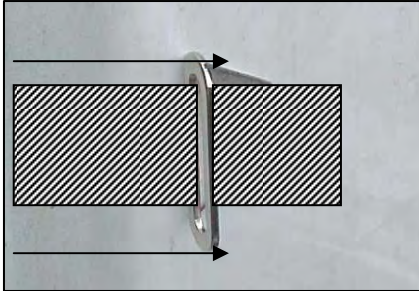


Figure 4



Figure 5



Figure 6

9. Tighten the webbing straps through Footman Loop and cinch as shown in Figure 7 and adjust the web tension as needed. **Note:** Your Rugged Ridge net should not droop or sag when properly installed.



Figure 7

Installation Complete



Made in China