



## 76336 Locking Hood Latch 07-up Wrangler 2Dr &4Dr

### Tools required:

13mm Deep Socket (1/4" drive)  
10mm Socket  
Socket wrench as required

4mm Allen Wrench  
6" 1/4" drive extension

### Included:

2 x Hood lock assemblies (w/rubber pad)  
2 x Hood catch (w/rubber pad)  
2 x Large nut  
2 x Large star washer


4 x Small pan head bolts  
4 x Small Nylock nuts  
4 x Small star washers  
4 x Flat washers

***Please read all instructions before beginning***

### Installation:

#### Step 1

Remove the factory hood latch assemblies from the vehicle on both sides.

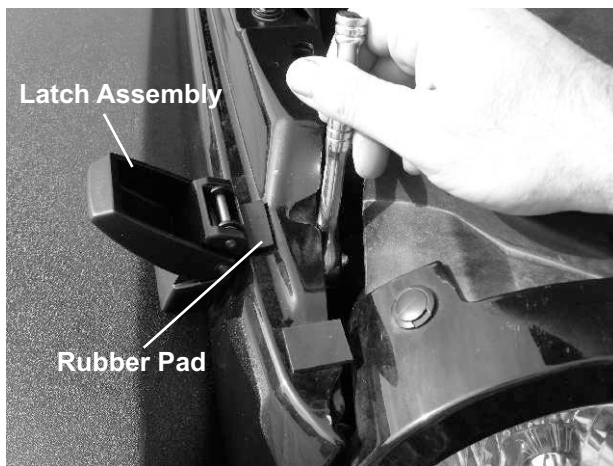

#### Step 2

Install the hood latch assembly onto the vehicle on the passenger side. Carefully use fingers to install large star washer and spin large nut onto the stud for the latch. Use a small 1/4" drive 13 mm deep socket to reach the nut and tighten.

**NOTE:** Be sure the rubber pad is properly installed between the latch base and the body and that it will separate the hood from the body when the hood is closed.

#### Step 3

Install the driver side latch assembly as in step 2. Use a 6 inch 1/4" drive extension to aid in access to the nut as shown at right.





#### **Step 4**

Install the hood catch onto the hood of the vehicle using the Allen head bolts, small star washers and small Nylock nuts.

**IMPORTANT**, place the small star washers under the head of the bolts on top of the catch not inside the hood.

Use the flat washers and the nylocks to fasten the catch. The slots should allow some adjustment to the catch

#### **Step 5:**

Repeat for other side.



#### **Use Instructions:**

Fold latch down and hook over catch on hood with hood closed and then fold latch assembly down solidly. Use key to lock the assembly in the hooked position. Check the lock to be sure it is hooked properly by pulling up on the rear section.

**CAUTION: Be sure to check the tightness of all fasteners periodically to ensure the hood stays latched properly while driving. Be sure the latch is tight and the locks are locked as instructed above. Use of this product is at the consumers risk and Rampage is not liable for damaged caused by improper installation or use.**

#### **Warranty Information**

Rampage products, Inc. warrants to the original purchaser of any step product it manufactures, that the product will be free of defects in material or workmanship for a period of 1 year from date of purchase. Such obligations under this warranty shall be limited to the repair or replacement, at Rampage products discretion, of any assembly or parts which, upon examination by Rampage products, Inc. proves to be defective. All defective items must be returned with proof of purchase to Rampage products, Inc., freight prepaid. This warranty does not cover damage resulting from abuse, misuse, alteration, accident or damage in transit. Rampage products obligations under this warranty are limited to the aforementioned repair or replacement of warranty defects for which the return authorization has been received during the warranty period, and Rampage products, Inc. shall not be liable for any incidental or consequential damages arising from breach of this or any implied warranty.

**Rampage Products 22420 Temescal Canyon Rd. Ste "C", Corona, CA 92883 Phone: (951) 277-4949 Fax: (951) 277-2295  
[www.rampageproducts.net](http://www.rampageproducts.net)**