




**Stainless Steel Hood Catch  
Installation Instructions  
Replaces Part #: RT26044**

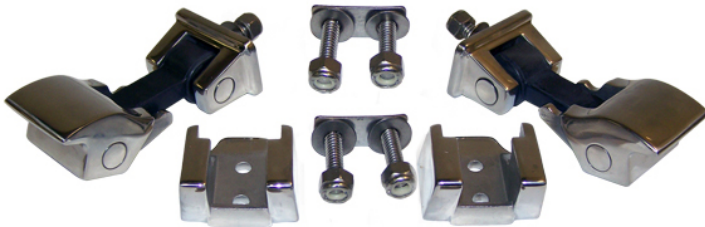

**Kit Contents**

- 2 – Lower Hood Catches w/ Hardware
- 2 – Upper Hood Catches
- 2 – Bolt Strips w/ Hardware

**Installation**

1. Ensure that all components in kit are accounted for.
2. Open the hood and remove the upper and lower hood catches.
3. Install the provided bolt strips onto the upper hood catches and install onto the hood using the provided hardware.
4. Install the lower hood catches using the provided hardware ensuring that the catch is oriented correctly.
5. Close the hood and ensure that the upper and lower hood catches are aligned. Improper alignment may cause premature wear to the rubber portion of the catch.

*While every attempt is made to ensure that the information contained in these instructions is correct, no liability can be accepted by the authors for loss, damage, or injury caused by any errors in, or omissions from the information given. All service should be performed by qualified mechanics. Crown Automotive Sales Co., Inc. cannot be held responsible for any mechanical work performed. Standard and accepted safety precautions should be used in every procedure.*