

## JK Billet Aluminum Oil Dipstick Handle 97-11

Contents: Oil Dipstick Handle (1)




PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE YOU BEGIN.


Step 1. Using a small punch press the pin out that holds the dipstick in the factory handle. Do not discard the pin it will be reused. Carefully remove the O-ring from the factory handle and install in onto the new handle .



Step 2. Install the small sleeve over the end of the dipstick. Insert the dipstick and sleeve into the handle. Align the hole in the dipstick, sleeve and handle.

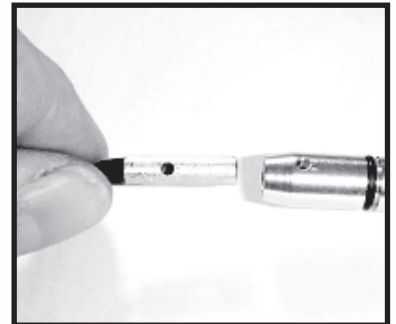

Step 3. Align the hole in the dipstick, sleeve and handle. Insert the pin removed from the factory handle using a small punch to set the pin.

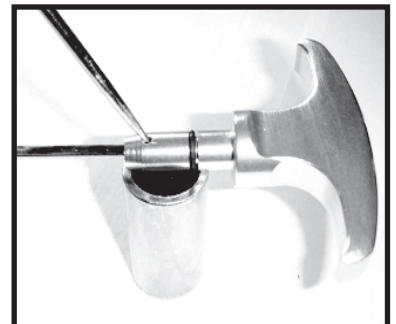

**Care and Maintenance:** Use soap and water to clean the aluminum surface. Regular cleaning will help maintain the appearance. Do not use harsh chemicals.

For Technical Assistance Contact:  
OMIX-ADA Tech Support  
Phone: 1-800-449-6649  
Email: [techsupport@omix-ada.com](mailto:techsupport@omix-ada.com)  
Web: [www.Omix-Ada.com](http://www.Omix-Ada.com)

Copyright Omix-Ada 2011